

## Seat Cushion Removal

- 1) Looking at the bottom side of the seat cushion, rotate all four (4) of the retaining clips to a position which aligns parallel to respective outer frame edges. (See Illustration 1)
- 2) Pull up on cushion to remove from seat frame.

