

# SafeGuard Tether Strap Routing Clarification


*Portable Child Safety*

The following information is provided to clarify the routing of the SafeGuard Go tether strap with different types of vehicle headrests. If you have additional questions after reading this information, please contact SafeGuard Customer Service at 1-800-586-7839.


## Vehicle Features (p.13)

Refer to your vehicle owner's manual to identify tether anchor locations and the type of vehicle headrest. The tether strap is routed differently based on the type of vehicle headrest as shown below.

### Movable Vehicle Headrest

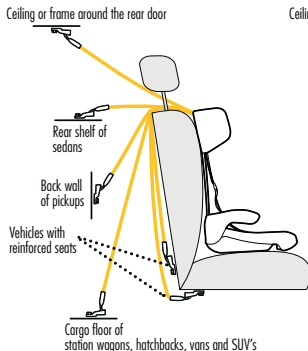

### Fixed Vehicle Headrest

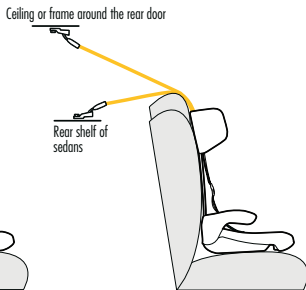

## Installation of Harness Mode In Vehicle

### 7. Prepare the tether: (pgs. 25/32/38)

- Movable Vehicle Headrest:

ALWAYS route the tether straps UNDER the vehicle headrest. If the tether straps cannot be routed UNDER the adjustable vehicle headrest, do NOT use the child restraint in this seating position. Route the tether straps between the vehicle headrest posts if possible. **G1**

- Fixed Vehicle Headrest:

Route the tether straps around or over the vehicle headrest. **G2** or **G3**

